



Walk in My Garden™



by Brenda Birrell



**Provo
Craft®**

Contents • Table des Matières • Indice • Inhalt

Introduction	4	Introducción	4
Introduction	4	Einführung	4

English

Meet the Designer	6	Frequently Asked Questions	18
Quick Start	7	Troubleshooting	20
Advanced Features	13	Quick Start Project	22

Français

Se retrouver avec le Dessinateur	24	Questions Fréquentes	36
Guide Rapide	25	Détection et Solution de Problèmes	38
Fonctions Avancées	31	Projet de Commencement Rapide	40

Español

Encuentro con el Diseñador	42	Preguntas Frecuentes	54
Guía Rápida	43	Detección y Solución de Problemas	56
Funciones Avanzadas	49	Proyecto de Iniciación Rápida	58

Deutsch

Lernen Sie den Designer kennen	60	Häufig gestellte Fragen	72
Schnellstart	61	Fehlerbehebung	74
Erweiterte Features	67	Schnellstartprojek	76

Icon Gallery	78	Galería de Iconos	80
Galerie d'icônes	79	Bildergalerie	81
Contact Us	132	Contáctenos	134
Contactez-nous	133	Verbinden Sie sich mit uns	135


Your Walk in My Garden™ cartridge package should include:
Votre cartouche Walk in My Garden™ devrait comprendre:
El envase de su cartucho Walk in My Garden™ debería incluir:
Ihre Packung Walk in My Garden™ muss Folgendes enthalten:




Cartridge
Cartouche
Cartucho
Kassette



Keypad Overlay
Panneau de Superposition du Clavier
Panel de Sobreposición del Teclado
Tastaturaufgabe

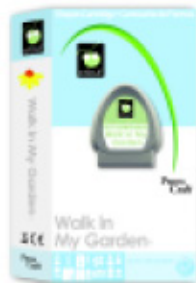


Binder
Classeur
Carpeta
Binder

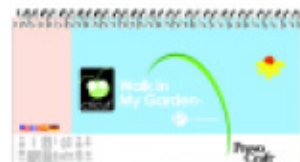


Handbook
Manuel
Manual
Handbuch

Content may vary slightly from illustrations shown.
Le contenu peut présenter des différences avec les illustrations.
El contenido puede presentar leves diferencias con las ilustraciones.
Der Inhalt kann sich von den Abbildungen etwas unterscheiden.

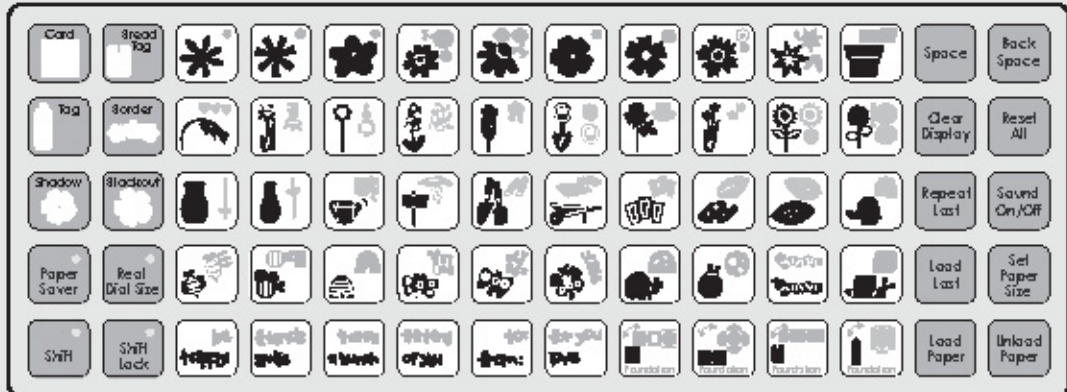

Walk in My Garden™

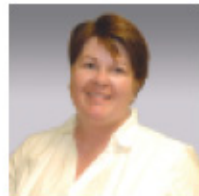

The characters on the Walk in My Garden™ cartridge were designed by:

Brenda Birrell



I love life and know it is best when shared with family and friends by spending time together and being thankful for one another. Creating thoughtful cards and journaling scrapbooking memories will bring joy to your life and those around you as you create from your heart. Life can get crazy busy and that's why I was delighted to create designs for the Cricut™ Personal Electronic Cutter™—to help simplify your life and keep projects quick and easy.

I feel very lucky to be able to play at work and the very best part is sharing the designs with you! I've been blessed to be surrounded by a special team of talented friends who share my dream of "simple creativity." Together we create images that will bring a smile to all of your paper projects.


Brenda Birrell is the founder of Pebbles in my Pocket and Pebbles Inc. She can be found with a camera in hand in Orem, Utah with her husband and five daughters. Just follow the flash!

This simple orientation will help you get started with Cricut™ cartridges.

TIP: For more detailed instructions, refer to the User Manual included with your Cricut™ machine.



1. Plug in and turn on your Cricut™ machine. Place the Keypad Overlay on the Cricut™ keypad.

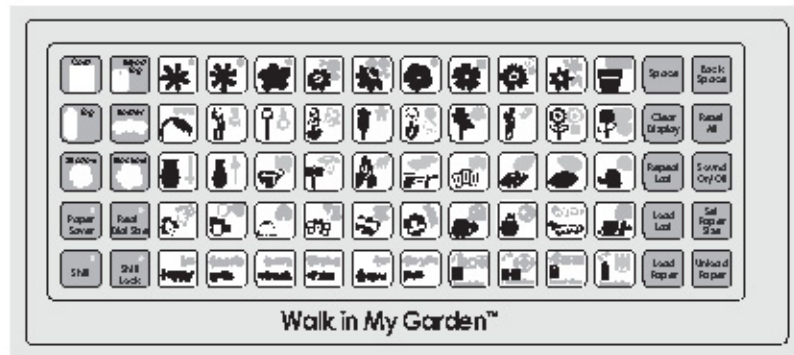



2. Insert the cartridge.

TIP: It is recommended that you turn your Cricut™ machine off before removing a cartridge, and that you wait to turn it back on until after inserting a new cartridge.



3. Prepare the Cutting Mat.


TIP: The surface of the mat has been treated to make it slightly tacky.

- A. Remove the clear plastic cover.
- B. Place a 6" x 12" sheet of paper on the Cutting Mat. Press and smooth from the center to the edges of the mat.
- C. Gently press paper and mat against the roller bar. (You will feel a slight resistance.)



4. Press the **Load Paper** key.

The paper will be pulled into the Cricut™ machine.

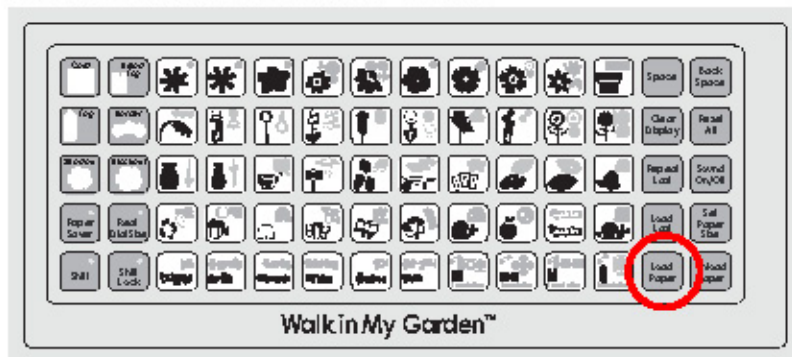

TIP: Your Cricut™ machine needs 12" of clear space in the front and back for paper movement in and out of the Cricut™ machine. If your paper does not load correctly, press the Unload Paper key and try again.



5. Select characters you want to cut.

(You can select up to 16 characters. They will be displayed on the LCD screen above the keypad.)



6. Select size.

Roll the Size Dial on the right-hand side of the Cricut[®] machine until the desired size appears in the LCD screen. For example, if the LCD screen displays 3", your character will be cut 3" tall.

TIP: For detailed instructions and advanced applications refer to the *Advanced Features* section of this handbook.



9. Remove paper from Cutting Mat.

TIP: Cricut® Tools are available to help you remove your cuts from the Cutting Mat.


The capabilities of your Cricut™ Personal Electronic Cutter™ are very broad and versatile!

The next section, Advanced Features, will introduce some of the exciting advanced techniques available to you.

TIP: We suggest that you practice on less expensive paper first, until your expected results are consistent.

Important Keys and Buttons

These will help you with advanced cuts.

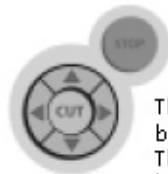

The STOP button adjacent to the CUT button will stop any operation in progress. The Blade Navigation Buttons move the blade to any location on the paper.



Paper Saver
Automatically arranges your selections to minimize paper waste



Real Dial Size
Cuts each character in the literal size selected



Shift
Allows a character on the upper right corner of a key to be selected



Shift Lock
Allows repeated selection of characters on the upper right corner of a key



Space
Enters an empty space



Clear Display
Clears the contents of the LCD screen



Repeat Last
Inserts the last selections that were cut onto the LCD screen



Load Last
Returns cutting blade automatically to where the previous cut ended



Load Paper
Pulls the paper and mat into the Cricut machine



Back Space
Deletes the last entered selection



Reset All
Clears the display and resets the Cricut machine to default settings



Sound On/Off
Turns the chirp on or off



Set Paper Size
Use with paper sizes smaller than 6" x 12"




Unload Paper
Ejects the paper and mat from the Cricut machine

Selecting Characters

How to use the Shift and Shift Lock keys



To select a character from the upper right corner of a key, use the Shift key on the keypad. You don't need to hold it down. Just press Shift once and make your selection.

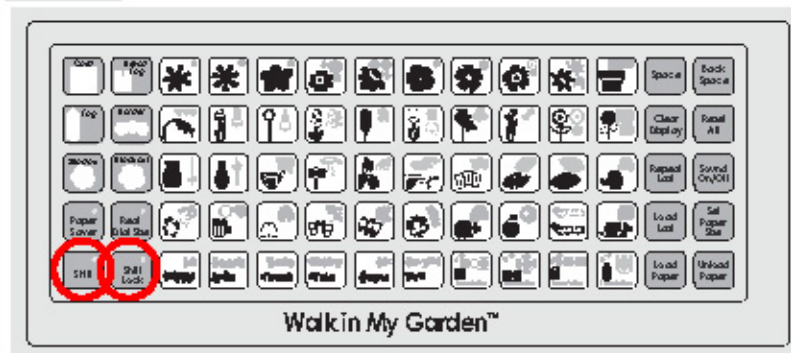

Use the Shift Lock key to select more than one character at a time from the upper right corners of keys. Press the Shift Lock key again to deselect it.

What Is Real Dial Size?



Real Dial Size OFF

Real Dial Size ON

All characters are measured from the lowest possible point to the highest possible point. In *Walk in My Garden*, all black (non-shifted) characters are created at the same height. The grey (shifted) characters are layers that fit proportionately to the black. If Real Dial Size is selected all characters will be cut according to the selected dial size.




What Are Creative Feature Keys?

The top three pairs of keys on the left panel are reserved for the Creative Feature effects of each set. These Features vary with each specific cartridge, providing greater versatility and thousands of options!

The Creative Feature keys included on the Walk in My Garden™ cartridge are Card, Bread Tag, Tag, Border, Shadow, and Blackout.



To use a Creative Feature key, just select it prior to pressing the CUT button. The characters displayed on the LCD screen will then be cut in the style of the selected Creative Feature. Due to their sizes and shapes, a Feature may not work with all shapes. Please refer to the Icon Gallery for Creative Feature details.

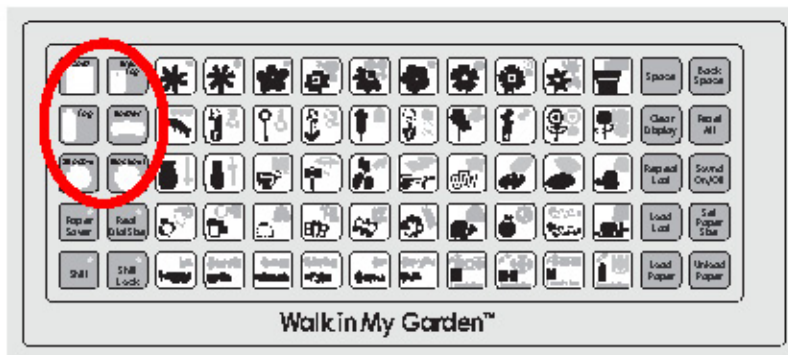

TIP: A Feature can be selected before or after a character has been selected, but before the CUT button is pressed. Once pressed, a Feature key will remain lit until it is turned off in one of the following ways: the Feature key is pressed a second time, the Reset All key is pressed, or a different Feature is selected. Only one Creative Feature key can be selected for each cut, and that Feature will be applied to all characters on the LCD screen.

What Is a Foundation Key?

 Your *Walk in My Garden™* cartridge contains four Foundation keys with two characters on each key. Foundation shapes are the solid version of images that were used as Creative Features, or proportional images that Creative Feature keys can be used with. These proportional images are Foundation/Companion shapes and are identified with an arrow. Foundation Shapes and Foundation/Companion shapes can be used alone or as layers using the Creative Feature keys. They can also be enhanced by adding shapes or phrases to them.

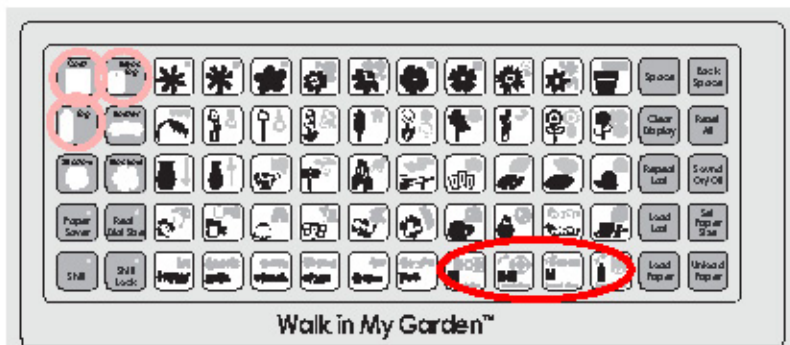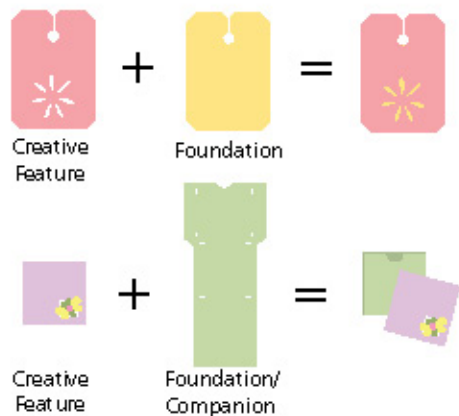

Frequently Asked Questions (For updated information about the Cricut® Personal Electronic Cutter® visit www.cricut.com)

How does the Cricut™ machine work and what size images can it cut?

The Cricut® Personal Electronic Cutter® is a cartridge-based cutting system. The blade is guided by an electronic cutting process. The Cricut® machine cuts characters ranging from 1" to 5 1/2" tall, as well as titles and borders as long as 11".

What kind of paper can the Cricut™ machine cut?

The Cricut® Personal Electronic Cutter® can cut a wide range of paper from vellum to cardstock up to 0.5 mm thick. Provo Craft has created cardstock pads and designer paper pads that coordinate with the Cricut® shape cartridges. These papers fit perfectly in the Cricut® machine.

Will I waste paper trying to get just a few images cut?

No. The Cricut® machine has an option called Paper Saver that cuts characters in an arrangement that minimizes the amount of waste from every cut.

Do I have to hold down the **Shift key to use it?**

No. Just press it down once and it will be backlit in green, indicating that it is in use.

Are the Creative Features the same for each cartridge?

Only the Shadow Feature is the same for each set. The other five Creative Features are unique to each individual cartridge.

How long will the cutting blade last?

Anywhere from 500 to 1500 cuts, depending on what kind of paper/cardstock you use. Replacement blades are inexpensive and easy to change. Refer to the "Replacing the Cutting Blade" section in the Cricut® User Manual.

How long will the Cutting Mat last?

Between 25 and 40 full-page cuts, depending on the size of the cuts and what kind of paper/cardstock you use. We recommend that you use several mats, rotating them often. This will extend the overall life of each mat.

Frequently Asked Questions (For updated information about the Cricut® Personal Electronic Cutter® visit www.cricut.com)

Can I use paper smaller than 6" x 12"?

Absolutely! Just align a corner of the smaller paper to the bottom left corner of the Cutting Mat. Once the mat is loaded, use the Blade Navigation Buttons to move the cutting blade down to the upper right corner of the paper. Then press Set Paper Size on the keypad overlay.

Do I have to finish cutting a full page before unloading?

No. You can unload the paper and remove just the pieces you need. You can then reload the paper at a later time and navigate to any open area to resume cutting. If you immediately use the same paper for your next cut, press the Load Last key instead of Load Paper. This will automatically return the cutting head to the last place it was cutting from.

What is the Paper Saver mode?

Paper Saver adjusts images upward or downward to minimize paper waste. This may result in an inaccurate "negative" shape left in the paper, but if you don't need to use the negative cut, this function works great. EXAMPLE: The tail on a lowercase "y" usually extends into the paper below the rest of the letters selected, indicating accurate readability. With Paper Saver selected, your Cricut® machine will automatically raise the "y" up so that the tail doesn't extend below the baseline of the other letters.

What does Real Dial Size do?

By default, your Cricut® machine will cut characters in proportion to each other. However, if you want to "break" this proportion and get any character to cut at the literal dial size, press the Real Dial Size key. EXAMPLE: With the Size Dial set at 2", a lowercase "a" will actually cut out at approximately 1" to fit proportionately with any other cut letter. With Real Dial Size selected, that same "a" would cut at a full 2".

How is a character cut measured? From the lowest possible point to the highest possible point.

What is the best way to transport my Cricut® machine? The Cricut® machine weighs only 9 lbs. and is easily transported. A specially designed tote is available with handy pockets and soft-touch zipper closures. It has in-line wheels for easy maneuvering and a pull-up handle. It is well padded to protect your Cricut® machine.

Troubleshooting (For updated information about the Cricut® Personal Electronic Cutter® visit www.cricut.com)

Problem: The Cutting Mat won't load when I press the Load Paper key.

Solution: Try pressing the mat slightly into the roller bar as you press the Load Paper key.

Problem: The mat didn't load when I pressed Load Paper. Now, when I try to press it again, it doesn't do anything.

Solution: You need to press Unload Paper first. Your Cricut® machine "thought" that it loaded the mat, even though it didn't pull it in. So it needs to be given the command to unload before another paper load attempt is made. Pressing the Unload Paper key will reset the roller bar, allowing for another paper load attempt.

Problem: The blade is not cutting all the way through the paper.

Possible Solution 1: Increase the cut pressure using the Pressure Dial on the left side of the Cricut® machine.

Possible Solution 2: Adjust the blade depth. This may be necessary if you are trying to cut through thicker stock. Refer to the "Adjusting Blade Depth" section in the Cricut® User Manual.

Possible Solution 3: The cutting blade may be dulled by use. Refer to the "Replacing the Cutting Blade" section in the Cricut® User Manual.

Problem: I can't get a character to cut with the Creative Feature selected.

Solution: Refer to the Icon Gallery to see which Features work with which characters.

Troubleshooting (For updated information about the Cricut® Personal Electronic Cutter® visit www.cricut.com)

Problem: The paper lifts off the mat as the Cricut® machine is cutting.

Possible Solution 1: Make sure you press the paper firmly onto the Cutting Mat when setting up the cut.

Possible Solution 2: Try using a new mat. Each mat will last between 25 and 40 full-page cuts, depending on the size of cuts and the kind of paper/cardstock that you use.

Problem: The mat is too sticky. It's ripping the paper when I try to remove it.

Solution: Use a craft knife or the Cricut® Tools (packaged as separate products) to successfully lift the paper/cardstock from the mat. (These are custom tools designed for lifting, pulling, or cleaning up the cut images.)

Problem: I've put a smaller sized paper on the mat and navigated the blade to the upper right corner, but when I cut a line of letters, the blade returns and starts cutting back at the top of the mat.

Solution: After you've navigated the blade to the upper right corner of the paper, and prior to pressing CUT, you need to press the Set Paper Size key. This will tell your Cricut® machine that you have selected a smaller paper size. Otherwise it "thinks" that a 6" x 12" paper is loaded.

Now you're ready to try a project!



"Thanks a Bunch" Card

Gather your words of appreciation into a beautiful bouquet and send it on its way to that special someone who took the time to care. You'll brighten their day when you say "thanks a bunch!"

Materials:

- White cardstock and a variety of pinks, greens, and oranges
- Fabric ribbon
- Adhesive
- Scissors
- Stapler



Step One:

Trim pink cardstock to 8.5" by 5.5" and fold in half to make a card. Trim a sheet of white cardstock to 5" by 3.5" and adhere it to the front of the card.

Step Two:

Load, using pink cardstock, cut a 2" "daisy2" flower. Using a different shade of pink, cut the same "daisy2" at 1". Using orange cardstock, press Shift, and then "daisy2." Rotate the size dial back to 2" and press CUT. Load a different shade of orange and press Shift "daisy2" once more. Move the size dial back down to 1" and press CUT. Using two shades of green, cut one 5.5" "buttonflower" (the third flower on the second row) in one shade, and then one 3" "buttonflower" in another shade. Use scissors to trim the flower tops off.



Step Three:

Place light orange paper on the Cricut™ mat and load it. Set your size dial to 1" and press Shift "thanks," and then press "abunch." Press CUT.



 
Step Four:

Adhere the words "thanks a bunch" to the card front. Staple a piece of green ribbon to the larger stem to make the leaves. Place stems to the left of the words. Layer the flower centers together as shown and place onto the flowers. Adhere your flower pieces over the green stems.

In the Icon Gallery, you will find a diagram for every character on your cartridge. The color change indicates that the image on the upper right is created using the Shift key and the image on the lower left is created without Shift. Using the Icon Gallery, you can see at a glance which Creative Features are available to use with the character that you have selected. You will find that some characters are very detailed and cut better at a larger dial size.


Walk in My Garden™ Creative Features:

Card
Bread Tag
Tag
Border
Shadow
Blackout

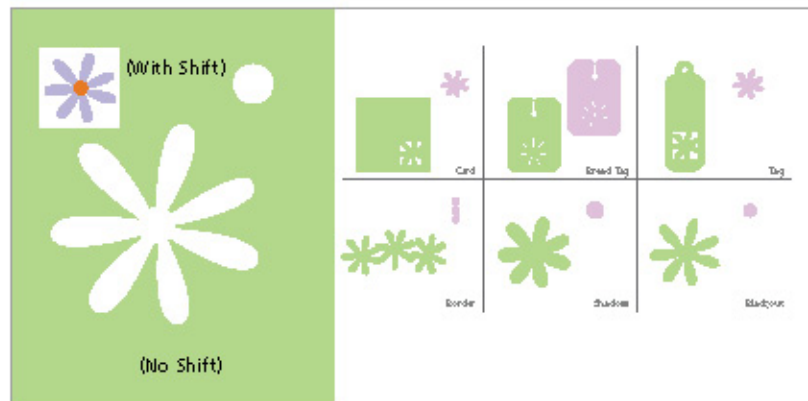



<daisy1-s>

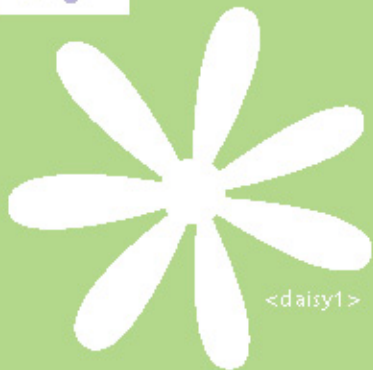

<daisy1>



Card



Bread Tag



Tag



Border



Shadow



Blackout






<aster-s>



<aster>

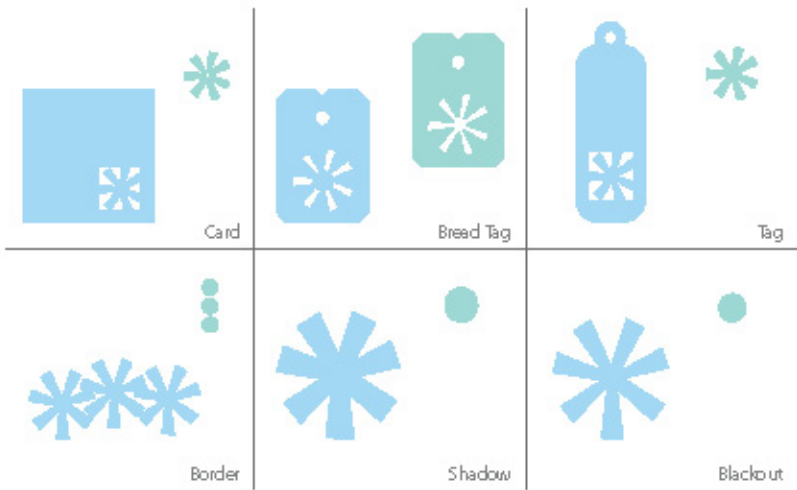




<posy-s>



<posy>

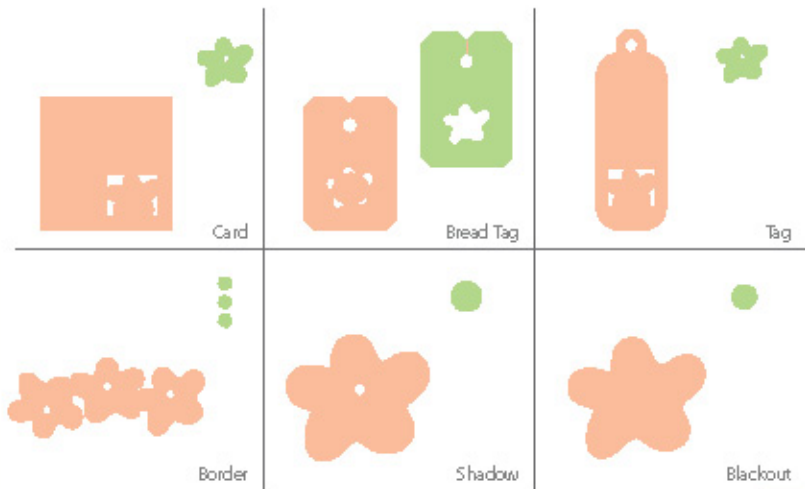



<daisy2-s>



<daisy2>



Card



Breed Tag



Tag





Border



Shadow



Blackout

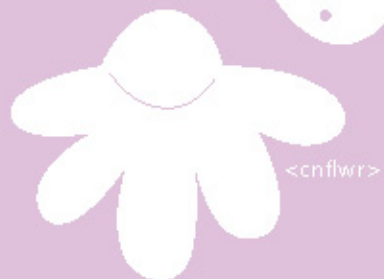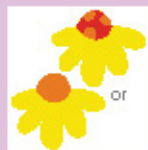

Card



Bread Tag



Tag



Border




Shadow



Blackout



<blossm>

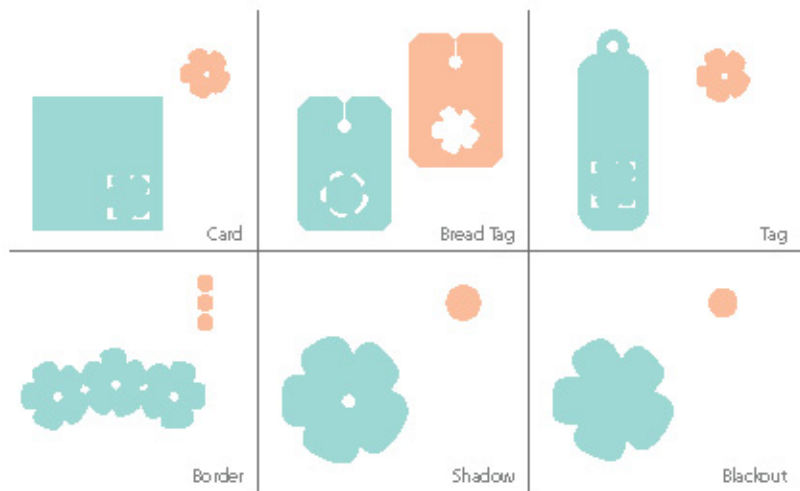



<flkdsy-s>



<flkdsy>



Card



Bread Tag



Tag



Border




Shadow



Blackout



<crpsis-s>

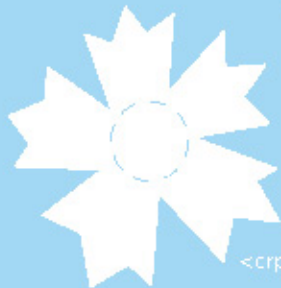

<crpsis >



Card



Breed Tag



Tag



Border



Shadow



Blackout



<stflwr-s>



<stflwr>



Card



Bread Tag



Tag



Border



Shadow



Blackout



<flwrpt-s>



<flwrpt >



Card



Bread Tag



Tag



Border



Shadow



Blackout




<bldhrt-s>



<bldhrt>



Card

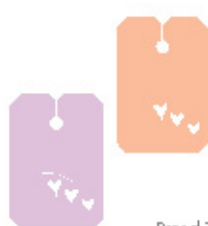

Bread Tag



Tag



Border



Shadow



Blackout





<daffdl>



<daffdl-s>



Card



Breed Tag



Tag



Border



Shadow



Blackout





<btnflr>



<btnflr-s>



Card



Breed Tag



Tag



Border



Shadow



Blackout





<hyacinth-s>



<hyacinth>



Card



Breed Tag



Tag



Border



Shadow



Blackout





<iris-s>



<iris>



Card



Breed Tag



Tag



Border



Shadow




Blackout



<rose1-s>



<rose1 >

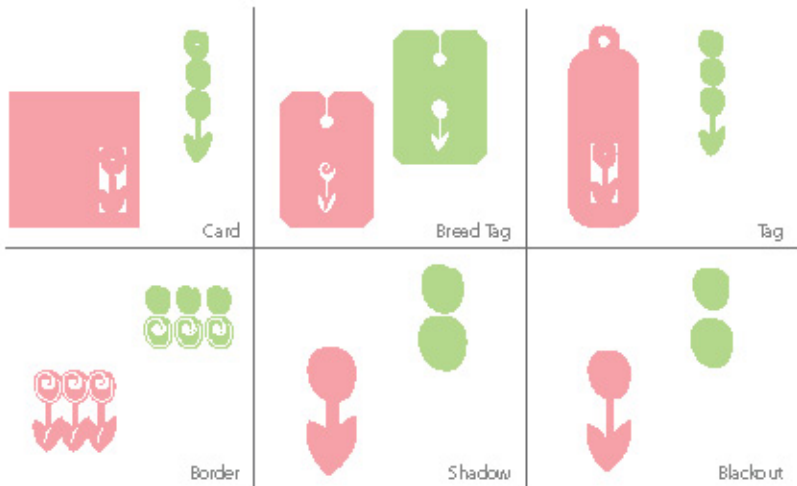




<rose2-s>



<rose2>

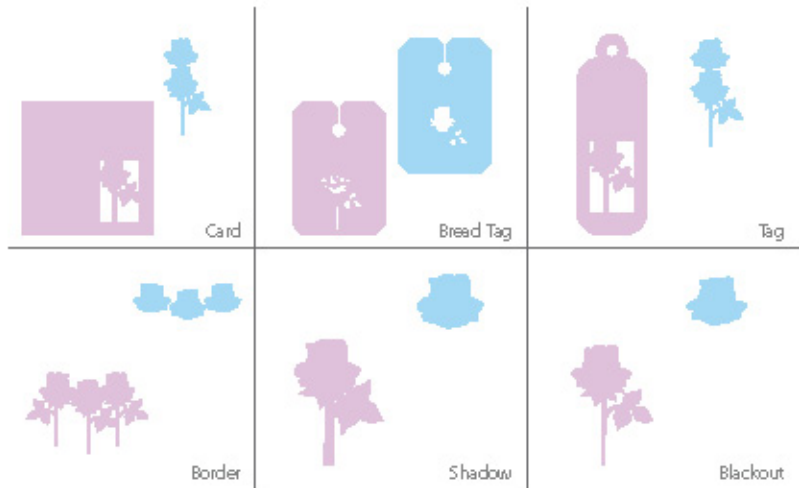



<tulip-s>



<tulip>



Card



Breed Tag



Tag



Border



Shadow



Blackout



<snflwr-s>



<snflwr>



Card



Bread Tag



Tag



Border



Shadow



Blackout





<hydrng-s>



<hydrng>



Card



Bread Tag



Tag



Border




Shadow



Blackout




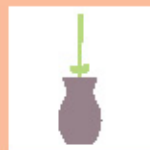

<stem1 >



<vase1 >

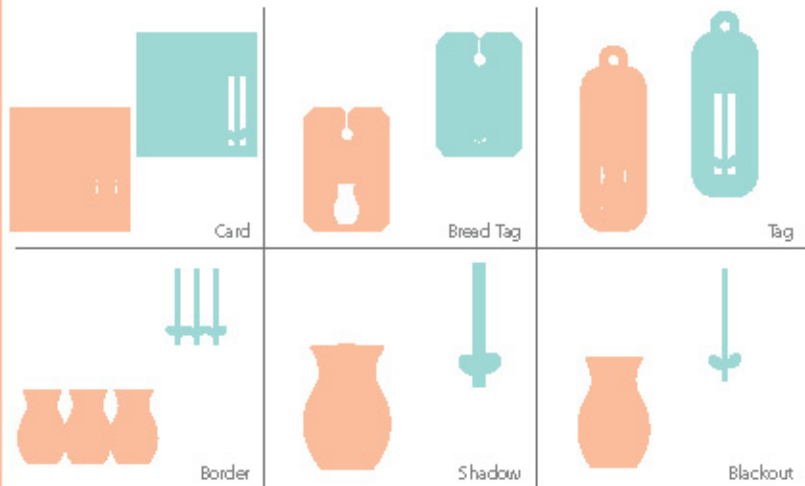




<stem2>



<vase2>

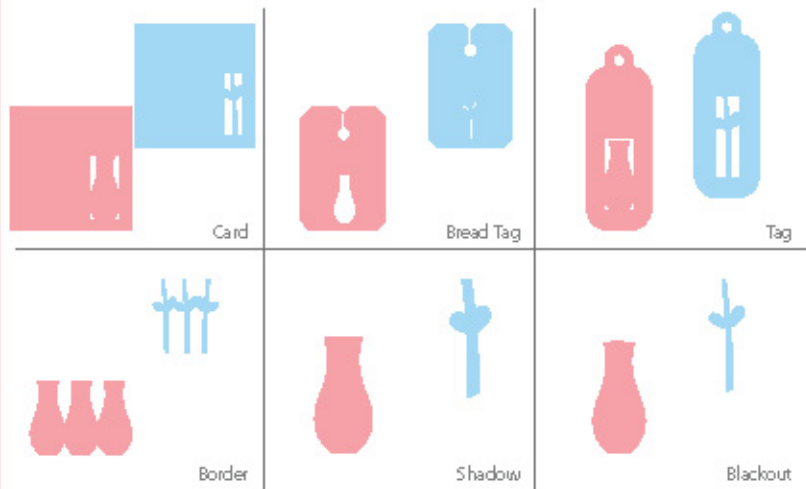



<wtrgcn-s>



<wtrgcn>



Card



Bread Tag



Tag



Border



Shadow



Blackout



<sign>



Card



Bread Tag



Tag



Border



Shadow



Blackout





<gdntls>



<gdntls>



Card



Bread Tag



Tag



Border



Shadow



Blackout





<whlbrw-s>



<whlbrw>

www.cricut.com



Card



Bread Tag




Tag



Border




Shadow

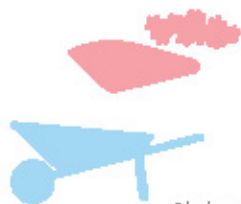

Blackout



<grass-s>

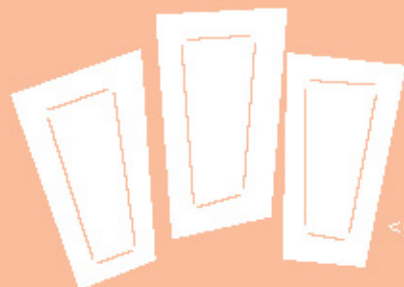

<grass>



Card



Bread Tag



Tag



Border



Shadow




Blackout

<leaf2>



<leaf1>

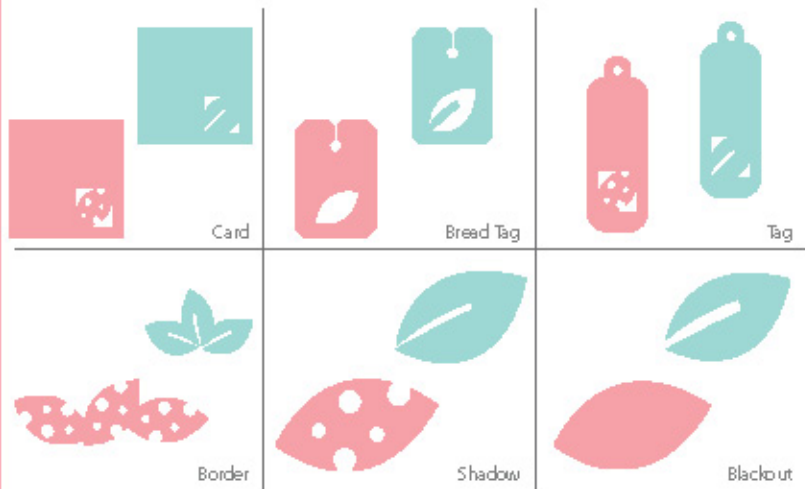

<leaf4>



<leaf3>



Card



Bread Tag



Tag



Border



Shadow




Blackout



<turtle-s>

<turtle>

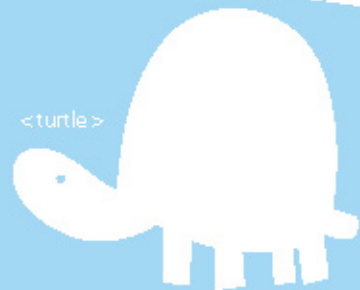

www.cricut.com



Card



Bread Tag



Tag



Border



Shadow



Blackout



Card



Bread Tag



Tag



Border



Shadow




Blackout



<bee2-s>



<bee2>

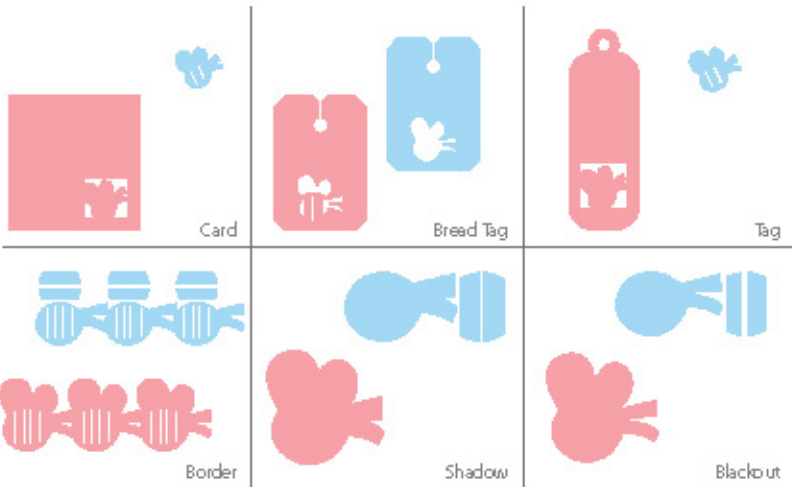



<beehive-s>



<beehive>



Card



Bread Tag



Tag



Border



Shadow



Blackout





<btfly1-s>



<btfly1 >



Card



Bread Tag



Tag



Border



Shadow



Blackout



<btfly2-s>



<btfly2>



Card



Breed Tag



Tag



Border



Shadow



Blackout





<btfly3-s>



<btfly3>



Card



Bread Tag



Tag



Border



Shadow



Blackout





<ldybg1-s>



<ldybg1>



Card



Bread Tag



Tag



Border



Shadow



Blackout



<ldybg2-s>



<ldybg2>



Card



Breed Tag



Tag



Border



Shadow



Blackout





<ctplr>



<ctplr>



Card



Breed Tag



Tag



Border



Shadow



Blackout



<snail-s>



<snail>



Card



Bread Tag



Tag



Border



Shadow



Blackout

<be>
be


<happy>
happy



Card



Bread Tag

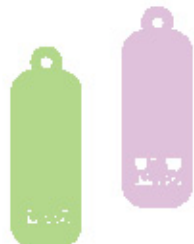

Tag

behappy
happyhappy

Border

be
happy

Shadow

be
happy

Blackout

<friends>
friends

smile
<smile>



<thanks>

thanks



a bunch

<abunch>




<thnking>

thinking


of you

<ofyou>

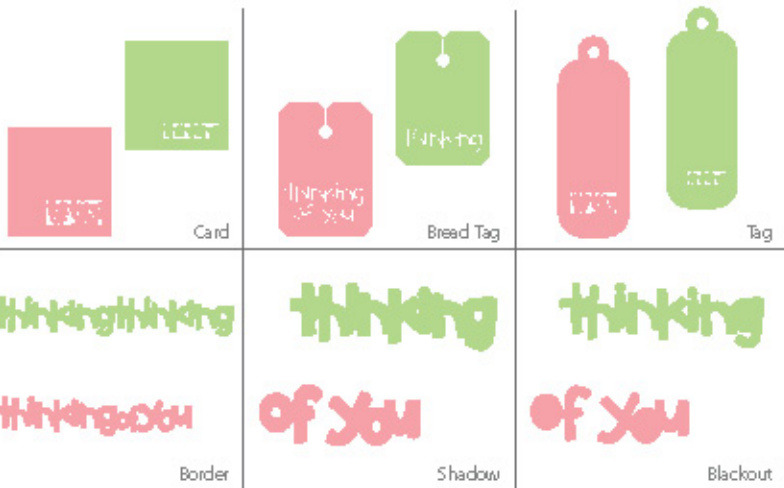


<to>
to:


from:
<from>

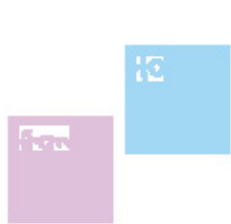

Card

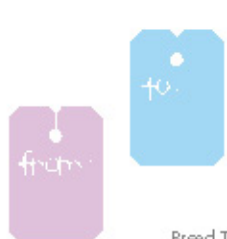

Breed Tag

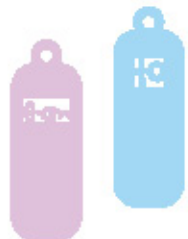

Tag



Border



Shadow



Blackout

<foryou>

for you

love

<love>





<envelope1>



<card1>



Card



Not Available

Breed Tag



Not Available

Tag

Not Available



Border



Shadow



Blackout



<envlp2>




<card2>



Card



Bread Tag

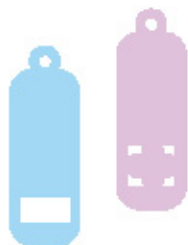

Tag



Not Available

Border



Shadow




Blackout



<fldcrd>



<brdtag>

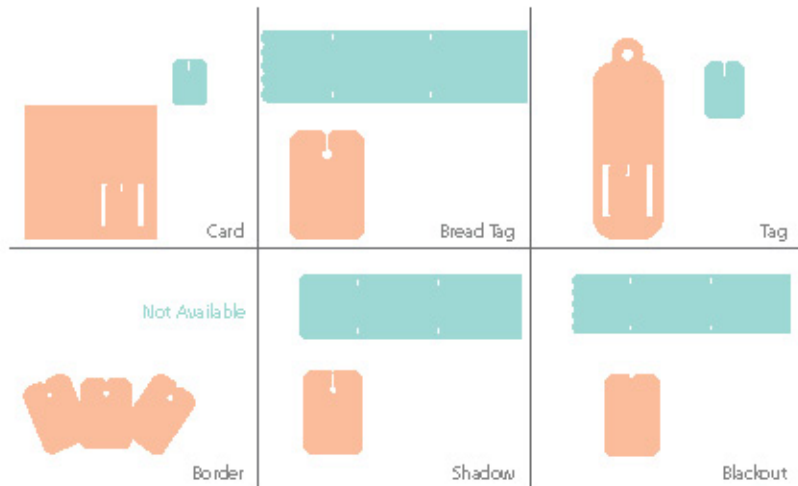



<tag>



<enwlp3>



Card



Not Available



Bread Tag



Tag



Border

Not Available



Shadow



Blackout





For in-depth information about using your Cricut™ Personal Electronic Cutter™ refer to the User Manual included with your Cricut™ machine. If you don't find the answers you need, support is available in the following two ways:

You will find the most current help and documentation on the Web site. Find answers to FAQs and Troubleshooting problems any time of the day.

INTERNET: www.cricut.com

Refer to the Customer Support information that came with your Cricut™ Personal Electronic Cutter™ or call for Customer Support options at:

PHONE: 1-877-7CRICUT (727-4288) Monday–Friday 9:00 a.m.–5:00 p.m., mountain time

29-0223 Walk in My Garden Handbook



Spanish Fork, UT 84660



© &™ 2006 Provo Craft and Novelty, Inc.
All rights reserved / Tous droits réservés
Made in China / Fabriqué en Chine
www.provocraft.com • 069006